


## Addendum for Updated EPP / Master Key Loading

There are two different Tranax pin pad styles. The principle difference between the two is the placement of the ENTER and CANCEL keys. They are switched. The new style pin pad has the ENTER key on the upper right hand corner of the keypad. The old style had the CANCEL key in the upper right hand corner.

One of the effects of this new configuration is a change in how master keys are entered. The old format (see below on left) had the D in the top right position and the F in the third from top position. The new format (see below on right) has the F key in the top right and D in the third from the top position.

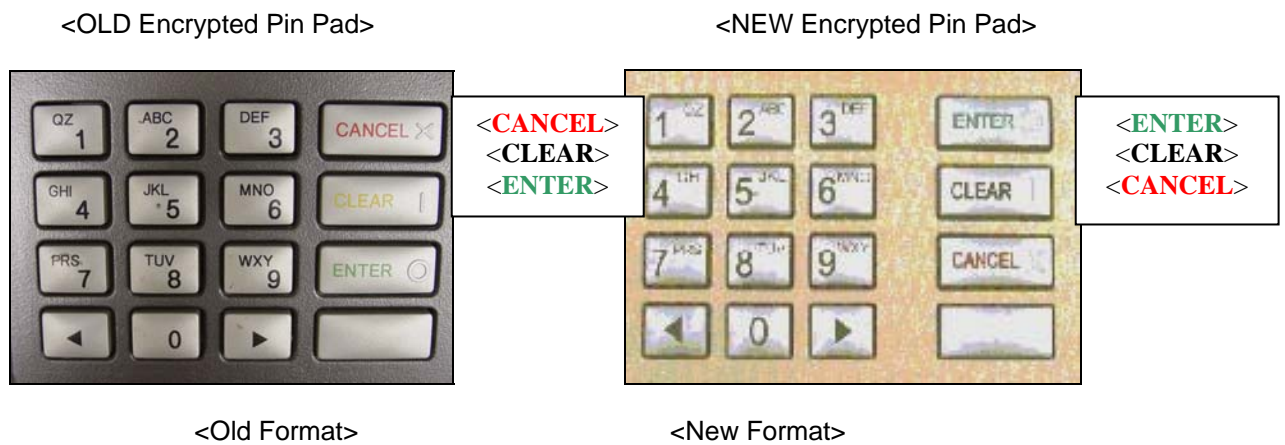

1	2	3	D
4	5	6	E
7	8	9	F
A	0	B	C

ABC**FED**  
Old Master Key Entry Format

1	2	3	F
4	5	6	E
7	8	9	D
A	0	B	C

ABC**DEF**  
New Master Key Entry Format

-vs-

If you have any questions please contact Tranax Technical Support Department.

For MB1500:

New keypad serial number will begin **OAFIxxxxxx** (old style is OACIxxxxxx) These two parts are not interchangeable.